


HT107

Applies to models:

NVx



How to:
replace a Gas Valve on a NVx heater

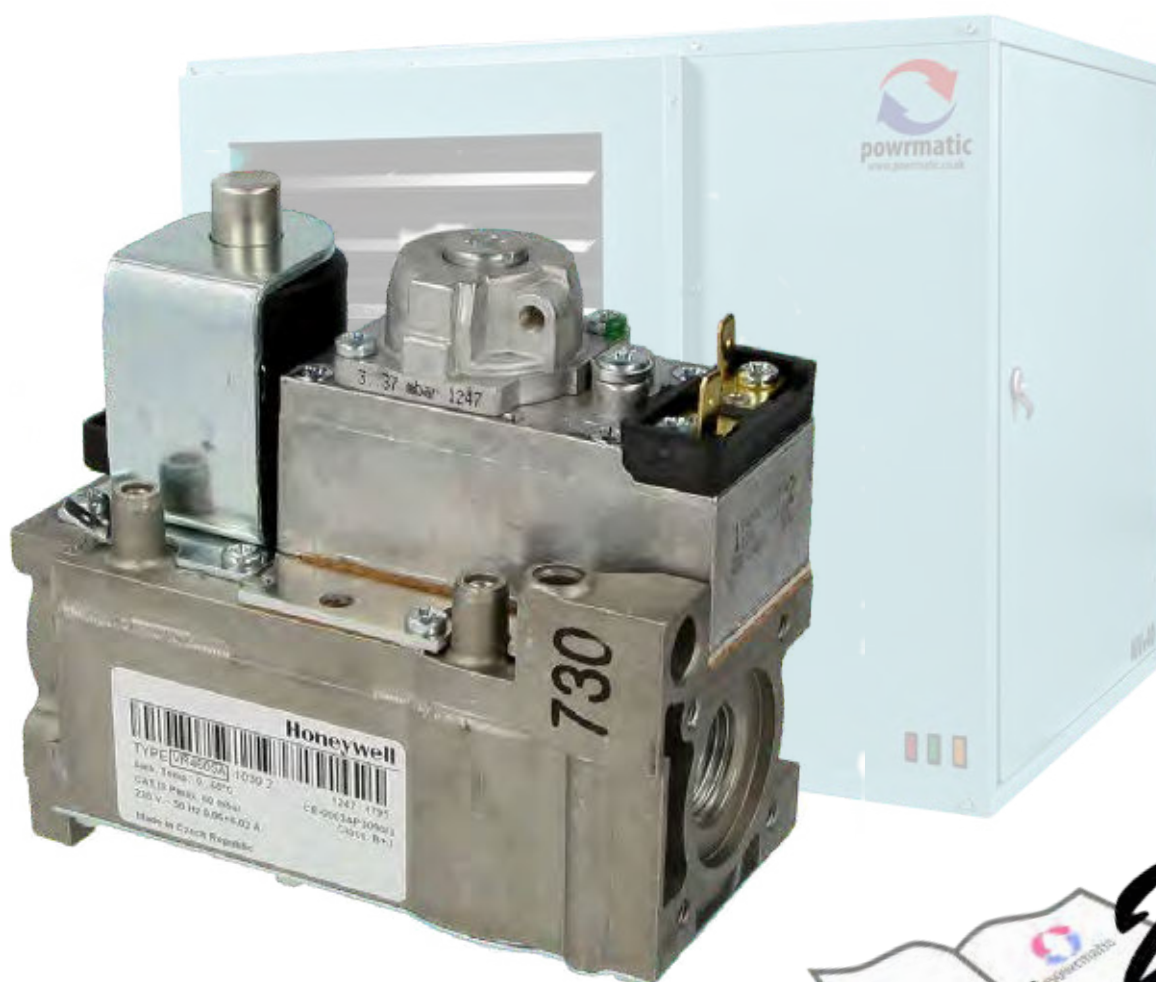

Procedure




WARNING: Always switch off and disconnect electricity supply and close service valve before carrying out any servicing or replacement of failed components.

1.1 Remove moulded plug connector from top of valve (2 screws).



1.5 Bottom screw may need hand turning. Remove valve.

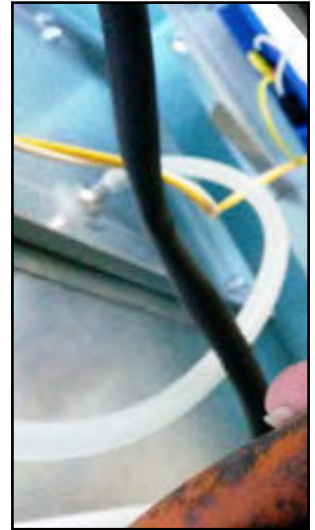

1.2 Remove inlet flange fixing screws (4).



1.6 Replace gas valve in reverse order ensuring correct orientation. Gas soundness and pressure setting should be done during re-commissioning.

1.3 If the incoming gas pipe is flexible enough, move it away from the valve.



1.7 To replace moulded plug, remove electrical panel cover.





1.4 Remove outlet flange fixing screws (4).



1.8 Remove cables t10 and cables t11 from terminal strip.

1.9 Remove earth cables for valve.

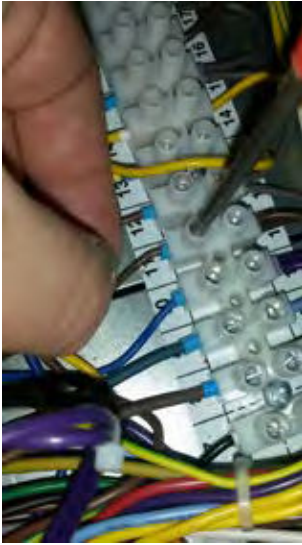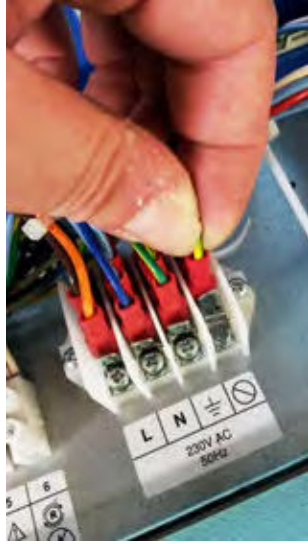

1.10 Replace blue neutral cable to t10 and brown live cable to t11 to terminal strip.

1.11 Check for correct operation of gas valve and replace electrical panel cover.





HEATING DIVISION
Hort Bridge
Ilminster, Somerset TA19 9PS
Tel: 01460 53535
Fax: 01460 52341



Every effort is made to ensure accuracy at time of going to press. However as part of continued product improvement, we reserve the right to alter specification without prior notice.